

WASHING MACHINE MANUAL

General Instructions

- Always check and empty the machine after use.

1. Adding laundry pod colour or white **

- **Laundry pod:** Put one pod colour or white into the washing machine
- **Fabric Softener:** Please do NOT use softener as we don't want to use the detergent box in order to keep the box clean and your clothes fresh without any dirt and bad smells from product residues.

2. Loading the Machine

1. **Sort Laundry:** Separate clothes by color, fabric type, and wash temperature.
2. **Check Pockets:** Remove items like coins or tissues to avoid damage.
3. **Load Clothes:** Place clothes loosely into the drum. Do not overfill.

3. Selecting a Wash Cycle

1. **Power On:** Press the power button (on/off)
2. **Choose a Cycle:** (example: Cotton)
 - **Rapid 14 min:** For lightly soiled clothes.
 - **Cotton:** For regular loads of cotton garments.
 - **Delicates:** For fragile items.
 - **Eco Mode:** Energy-saving option for regular loads.
 - **Spin/Drain:** For extra drying.
3. **Adjust temperature:** push gently the icon 'temperature' (example: 40 to 30)
4. **Adjust time of washing cycle:** push gently the icon 'clock'. By every push the time of washing will reduce. (example: 2:27 to 00:49).

5. Starting the Wash

- Close the door securely.
- Press the **Start** button.

WASHING MACHINE MANUAL

6. After the Wash

1. **Remove Laundry:** Take clothes out promptly to prevent wrinkles and odors.
2. **Clean the Drum:** Check for any remaining items.
3. **Leave the Door half Open:** Allow the drum to air dry.

7. Troubleshooting

- **Machine Won't Start:** Check if the door is closed properly and the machine is plugged in.
- **Water Not Draining:** Ensure the drain hose is clear.
- **Error Code:** Refer to the error guide provided in the machine manual located in the cupboard above the washing machine.

For additional assistance, please contact us at +32 479 542 572 (call or whats up)

or call +36 30 693 5676.

Thank you for using our facilities. We hope you enjoy your stay!

WASHING MACHINE MANUAL

Follow these steps:

1. Put pod in empty machine
2. Put clothes in the machine
3. Push on/off button
4. Choose cycle by turning the button : for example Cotton
5. Push gently 'temperature' button and adjust the right temperature (if needed)
6. Push gently 'Time' button and adjust the right time of washing (if needed)
7. You can change time from max. 2:27 till 0:49
8. Push the 'play' button to start

